

# Cleaning instructions WMF presto!

Please refer to the User Manual.

Follow the overview of the cleaning interval schedule in the Care chapter in the User Manual. Prior to the first cleaning read the User Manual, Care chapter: "General cleaning", "Weekly cleaning" and "Regular cleaning".



<p><b>1</b></p> <p>* Touch clear area</p>	<p><b>2</b></p> <p>Additional pads are activated. * Touch <b>MENUE</b> (Main menu)</p>	<p><b>3</b></p> <p>* Touch <b>Care</b></p>	<p><b>4</b></p> <p>The submenu appears. * Touch <b>cleaning prog.</b></p>	<p><b>5</b></p> <p>* Touch <b>switching off</b></p>
<p><b>6</b></p> <p>* Touch <b>start</b> The cleaning program starts.</p>	<p><b>7</b></p> <p>* Mix 5 ml of WMF Special cleaner with 0.5 l of lukewarm water</p>	<p><b>7.1</b></p> <p>* Insert milk hose</p>	<p><b>8</b></p> <p>When Step 7 completed: * Touch <b>Yes</b></p>	<p><b>9</b></p>
<p><b>9.1</b></p>	<p><b>10</b></p> <p>* Prepare 0.3 l of clear, cold water for the water rinsing * Insert milk hose * Touch <b>Yes</b></p>	<p><b>10.1</b></p>	<p><b>11</b></p> <p>Rinsing starts. Duration approx. 20 seconds.</p>	<p><b>11.1</b></p>
<p><b>12</b></p> <p>Foamer cleaning reminder appears on display. For foamer cleaning see next page, steps A to C. * Touch <b>ok</b></p>	<p><b>13</b></p> <p>Mixer rinsing starts. Duration approx. 30 seconds.</p>	<p><b>13.1</b></p>	<p><b>14</b></p> <p>* Touch <b>start</b> Machine cleaning starts.</p>	<p><b>15</b></p> <p>* Empty grounds container and drip tray * See steps 16 to 19</p> <p><b>Caution.</b> If not connected to main drainage, place collection container (2 litres) underneath.</p>




Continue on reverse side.

**16**




- \* Push combi spout all the way up
- \* Push up adjustable screen all the way up

**17**



- \* Remove and empty grounds container


**18**



- \* Remove and empty drip tray


**⚠ Caution.**  
Without a drain connection, the drip tray must be emptied.

**19**

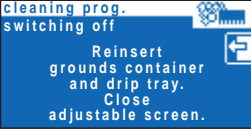

- \* Replace drip tray
- \* Insert the grounds container
- \* Close the adjustable screen

**20**

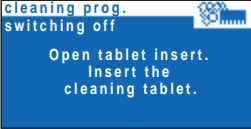

*Manual insert is either in the centre between the product hoppers or in the centre behind the hoppers.*


- \* Open the manual insert

**20.1**




- \* Add a special WMF cleaning tablet

**20.2**

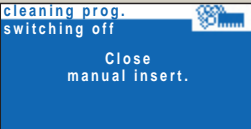

- \* Close the manual insert


**21**

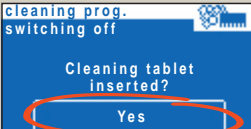

*Cleaning tablet inserted.*

- \* Touch **Yes**

**22**

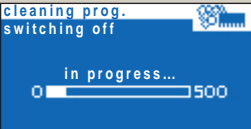

*Machine cleaning starts. Duration 8–10 minutes.*

**22.1**




**⚠** **Foamer cleaning:** for intermediate cleaning, see "foamer cleaning" below.  
**Manual combi spout cleaning without Plug&Clean:** perform at least **once per day**. See below.

**Combi spout cleaning at least 1 x daily**

*Prior to cleaning switch off using the ON/OFF button. Disconnect mains plug*

**A**



- \* Pull forward the lever behind the combi spout
- \* Remove combi spout
- \* Remove milk hose from milk container and release from combi spout


*If a mixer is fitted:*

- \* Release the mixer hose

**⚠ Caution.**  
Carefully disconnect the milk hose.

- \* Mix 5 ml of WMF Special cleaner with 0.5 l of lukewarm water

**B**



- \* Dismantle combi spout
- \* Immerse one end of the milk hose in the cleaning solution

- \* Immerse the length of the remaining milk hose in the cleaning solution


*This procedure prevents air bubbles from remaining in the milk hose.*

- \* Place all parts of combi spout in the cleaning solution (3 parts)

*All parts must be completely immersed in the cleaning solution.*

- \* After 5 hours, clean all parts thoroughly with a brush

**C**



- \* Rinse combi spout and milk hose very thoroughly with clear water

*If a mixer is fitted:*

- \* Rinse mixer hose very thoroughly
- \* Reassemble combi spout
- \* Replace combi spout
- \* Insert milk hose

*If a mixer is fitted:*

- \* Insert mixer hose

**Foamer cleaning**




**Foamer cleaning only**

- \* On the Care submenu, touch **foamer cleaning**

*See steps 6 to 12.*

**Mixer rinsing**

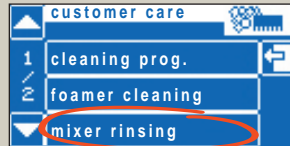

**Mixer rinsing only**

- \* On the Care submenu, touch **mixer rinsing**

*Mixer rinsing starts.*